



Craftsman Model 315.10721 Brush Replacement

This guide will show the proper steps for replacing the brush inside the motor of the saw.

Written By: Riley Hilliker



INTRODUCTION


Often times it is only necessary to replace the carbon brushes, not the motor. Carbon brushes experience a lot of friction, and replacement is generally expected over time. **Ensure your saw is unplugged before beginning the repair**



TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Brush

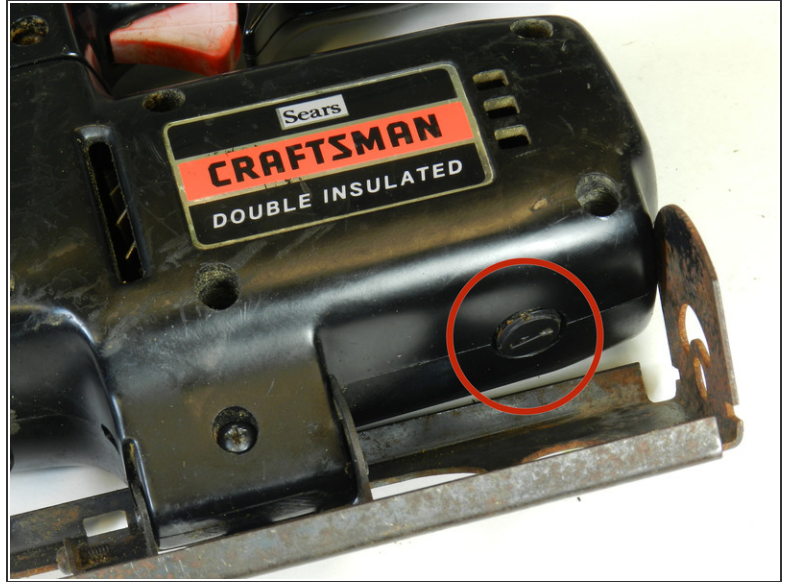

- Using a flathead screwdriver, remove the brush caps on the outer casing of the saw near the motor.

Step 2



- Using a Phillips #00 screwdriver or a small diameter nail, carefully pull out the washer.
- ⓘ The washer is seurely held in place and may require force to remove

Step 3



- After the washers are removed, gently grab the old brushes and remove them from the motor.
- ☑ When reassembling make sure the curvature of the brushes match curvature of the motor.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-06 02:50:24 AM.